

TEST REPORT



Report No. : 20-045616-01-2

Page of Pages : (1) / (2)



1. Client

Name : Forward Medi Co., Ltd

Address : Hangang Xi Tower B-804, 401, Yangcheon-ro, Gangseo-gu, Seoul

Date of Receipt : 2020. 07. 15.

2. Use of Report : For quality control

3. Test Sample

Description : Air Sterilizer

Manufacturer : STR Solution Co., Ltd.

Model Name : W-7700G

Serial Number : ***

Remark : ***

4. Date of Test : 2017. 10. 12. ~ 2017. 10. 14.

5. Location of Test :

KTL Permanent Test Lab (Address : 87, Digital-ro 26-gil, Guro-gu, Seoul, KOREA)

On Site Testing


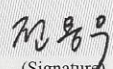
6. Test Standard/Method : KOUVA AS 01 : 2015

7. Test Results : Refer to the attached results

Note : 1. This report is limited to samples submitted by the applicant and is prohibited from being used for legal or other reasons of dispute.

2. This document is valid only in its original document, and any reproduced copies and electronic copies are not valid. ("Original" means all the reports provided by the KTL including the security procedures.)

3. You can check the contents of the report by scanning the 2D Barcode below. The identity of original reports can be checked in the "Confirm original report" window of the customer's homepage (customer.ktl.re.kr).


| | | |
|-------------|---|---|
| Affirmation | Tested by | Technical Manager |
| | Name : Lee, Jung-hoon  (Signature) | Name : JEON, Yong-Woo  (Signature) |

2020. 07. 20.

Korea Testing Laboratory

87, Digital-ro 26-gil, Guro-gu, Seoul, KOREA Tel.+82-2-860-1692 Fax. +82-2-860-1689

FP104-07-00



※ 위 마크는 추후 전자확인증 대조 프로그램에서 원본대조시 사용되는 2D코드입니다.

Test Results

1. Airborne viral Test

| Unit | Results | Reduction rate | | |
|----------------|---------|----------------|--------|--------|
| | | 1 min. | 3 min. | 5 min. |
| Air Sterilizer | | 0.3 % | 55.1 % | 83.3 % |

2. Test sample

- (1) Manufacturer : STR Solution Co., Ltd.
- (2) Model name : W-7700G
- (3) Serial number : ***

3. Test Method and Conditions



| Test method | Conditions | | | | | |
|-----------------------|-----------------------------|-------------|-------------------|------------------|------|----------|
| | Virus | Temp. | Humidity | Test Chamber | Unit | Air flow |
| KOUVA AS 01 : 2015 | Phi-X174 (ATCC 13706-B1) | (23 ± 2) °C | (50 ± 5) % RH. | 8 m ³ | 2 ea | Max. |

4. Unit Photograph



- End of document -

FP104-08-00



※ 위 마크는 추후 전자확인증 대조 프로그램에서 원본대조시 사용되는 2D코드입니다.